PHILIPS VIDEOPAC 1-4

Gunfighter
Revolverhelden
Duel
Revolverheld
Western
Cowboy-duell
Pistolero

8622 271 14009

PHILIPS

Instructions for use

Gunfighter
(0, 1 or 2 players). Press key 1.

Two gunfighters appear on the screen. Use the left handset to control the blue man, and the right handset to control the red man. Score a point by shooting down your opponent before he shoots you – you can take cover behind the rocks, but watch out for ricochets! The first player to score 10 points wins.
Move your gunfighter until he has a clear horizontal shot at your opponent, and then press the action button. If he shoots in the wrong direction, move the joystick to the left or right and then try again.
The men are armed with six-shooters. The number of bullets you have left are shown at the bottom of the screen. If you run out, you can reload by touching the rock which has exactly the same colour as your man.
If, at the beginning of the game, you leave one of the handsets, the computer will take control of the corresponding gunfighter. If you leave both handsets, the computer will take control of both gunfighters. The red gunfighter has a slight advantage, so you should change handsets with your opponent at the end of each game.

Each time a game is finished, press RESET (Δ), 'SELECT GAME' is shown on the screen. Now:

a) Select another game.
b) Select another Videopac.
   Remove existing Videopac by placing one hand next to it, and pulling handle upwards.
   Replace Videopac in its box.
   Refer now to Instructions for Use of the next Videopac.
c) Plug aerial back into TV, and unplug the Videopac Computer from the mains.

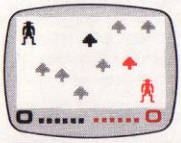

Start of the game.

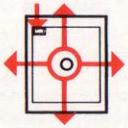

Use handset to move gunfighter.
Press button to shoot.

A point to blue!

Check procedure

If you suspect a fault in the equipment follow this procedure (with a Videopac installed). Press RESET (Δ). The TV will emit a short sound, and 'SELECT GAME' should appear on your TV screen. If not, ensure that the equipment is set up properly as detailed in the Instructions for Use (both of the equipment, and of the Videopac used). If the fault remains, take both the equipment and Videopac to your dealer.

A copyright protection is claimed
on the program stored within the cartridge

© 1980 N.V. Philips Gloeilampenfabrieken

3111 106 61680

SIP